


Stator flange slip ring installation instruction.


Stator flange slip ring means flange located on outer of the slip ring, picture as below:



Installation diagram (2D) :

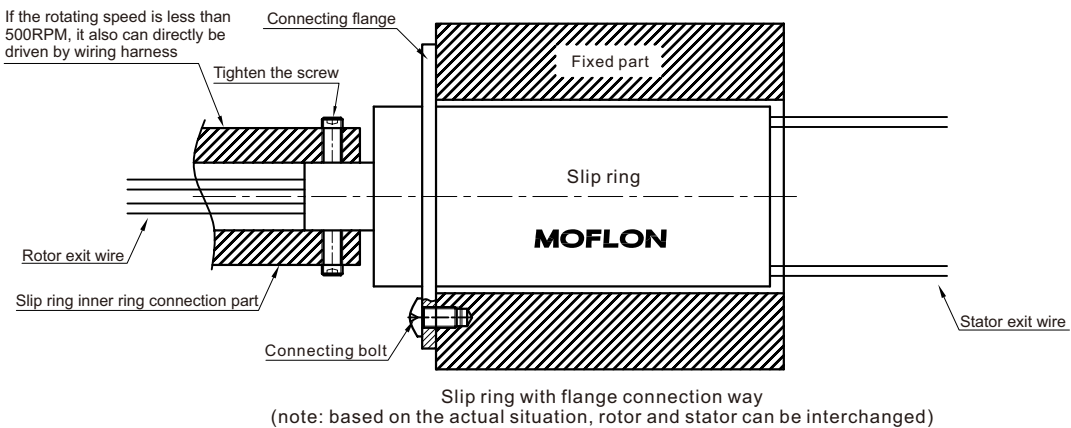

Installation diagram (3D) :

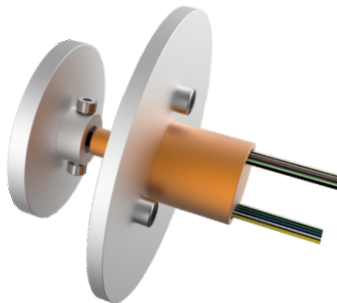

Installation instruction:

1.Rotor fixation

- For miniature, compact slip ring, it can rotate with cable,without fixed.
- For large stator flange slip ring,it can use screws or flat place to fix

2.Flange fixation

Fixing flange on stator side,and locking the screws.

Notes:

- ① Slip ring just can bear own weight,the leads also can't bear external pulling force.
- ② Protecting the leads to avoid wire insulation damaged and affect the product quality when installing.
- ③ Slip ring is a precision electrical component, it should works in a dry, less dust environment. It must add some protection if working in strict condition.
- ④ Ensure the screw is tight..
- ⑤ Stator leads keep away from axis and rotor leads away from fix part to avoid scratching wires.
- ⑥ Stator and rotor part can be exchange according to the demands.